

AUDIO AND NAVIGATION SYSTEM

AUDIO AND NAVIGATION SYSTEM

ANTI-THEFT SYSTEM

A6E81246900W01

Alarm Conditions


- If the anti-theft system protection has been activated, any one of the following conditions will trigger the system:
 - Disconnected battery cable
 - Discharged battery
 - Disconnected audio unit connectors
- If the system is triggered, the audio unit will then be inoperative when it is reconnected to a power source, and “code” will flash on the display until the preselected code number is input. If the anti-theft system is triggered, follow the procedures in “Canceling Anti-theft Operation” to reset the unit.

Operation	Reference
Input code number to activate anti-theft system	Setting the Code Number
Delete previous code number and set new number	Canceling the Code Number
Resume audio unit operation after anti-theft system is triggered	Canceling Anti-theft Operation

Setting the Code Number


Complete each step (Steps 1–3) **within 10 seconds** or the setting procedure will be canceled.

1. Turn the ignition switch to ACC position and then turn off the audio unit.
2. First press the AUTO-M button, then simultaneously press channel button 6 for **approximately 2 seconds** until “CODE” appears on the display.

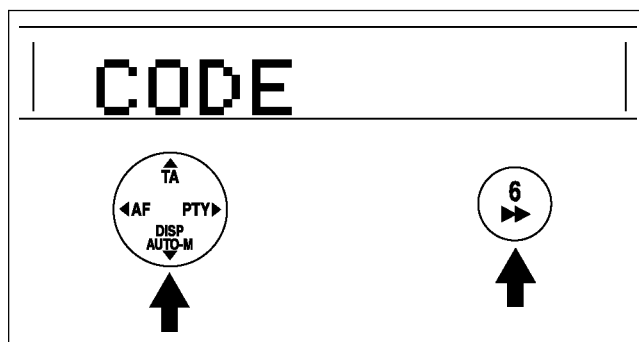


A6E8124W025

3. Press the AUTO-M button again, then simultaneously press channel button 6 until bars appear on the display.
4. Select a personal code number and record it before inputting it. If the number is input and then forgotten, it cannot be canceled, and if the unit is disconnected again, the audio unit will be inoperative.

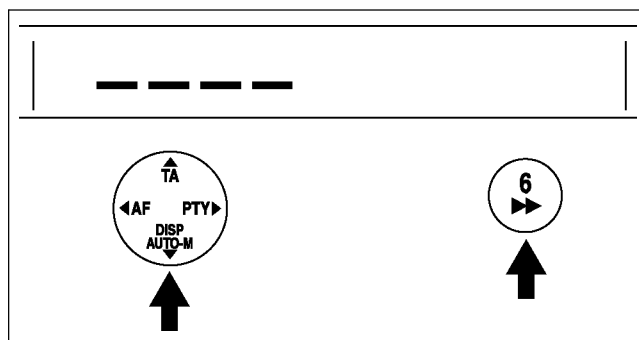

A6E8124W026

5. Use channel buttons 1–4 to input the selected code number. Press button 1 for the first digit, 2 for the second, 3 for the third, and 4 for the last digit. Input the number **within 10 seconds**. If the display is deleted, repeat the procedure from Step 1.

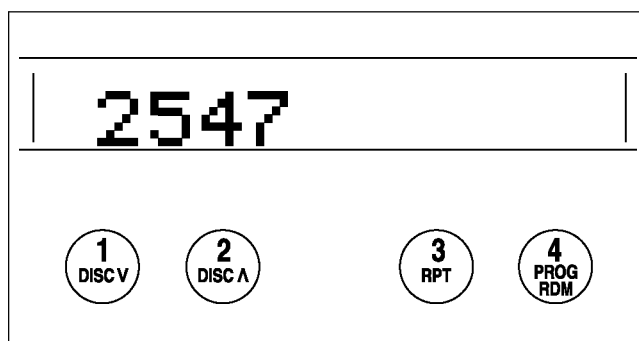

A6E8124W027


Note

- Perform Step 6 **within 10 seconds** after Step 5.

T

AUDIO AND NAVIGATION SYSTEM

6. With the code number displayed, press the AUTO-M button, then simultaneously press channel button 6 for **approximately 2 seconds**. "CODE" will be displayed for **approximately 5 seconds**. After it disappears, the code number is set.
7. If "Err" (error) appears on the display, repeat the procedure from Step 1. If input error is repeated three times, turn the ignition switch to LOCK position and repeat the procedure from Step 1.

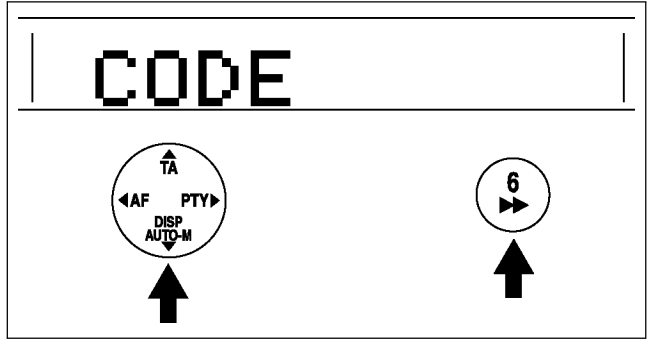


A6E8124W025

Canceling the Code Number


Complete each step (Steps 1–3) **within 10 seconds** or the canceling procedure will be canceled.

1. Turn the ignition switch to ACC position and then turn off the audio unit.
2. First press the AUTO-M button, then simultaneously press channel button 6 for **approximately 2 seconds** until "CODE" appears on the display.

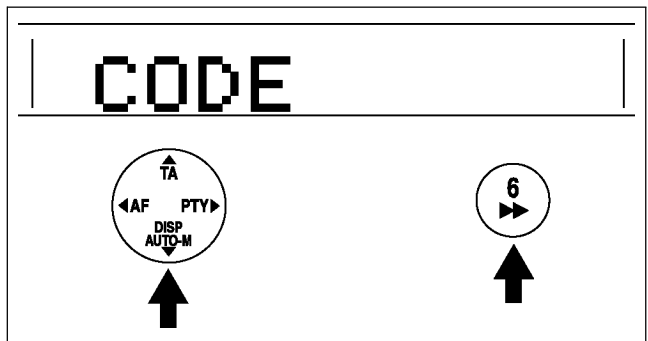

A6E8124W025

3. Press the AUTO-M button again, then simultaneously press channel button 6 until bars appear on the display.

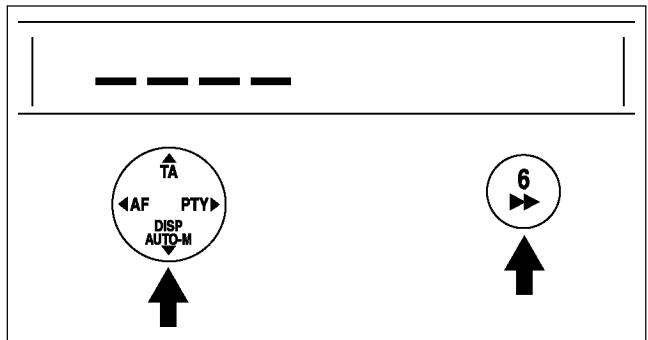


A6E8124W026

4. Use channel buttons 1–4 to input the current code number. Press button 1 for the first digit, 2 for the second, 3 for the third, and 4 for the last digit. Input the number **within 10 seconds**. If the display is deleted, repeat the procedure from Step 1.

Note


- Perform Step 5 **within 10 seconds** after Step 4.

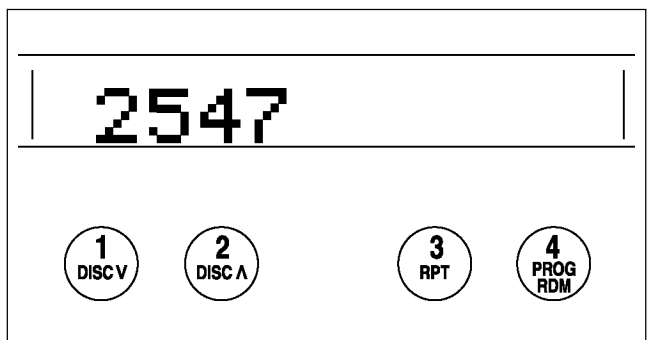

A6E8124W027

AUDIO AND NAVIGATION SYSTEM

5. With the code number displayed, press the AUTO-M button, then simultaneously press channel button 6 for **approximately 2 seconds**. "CODE" will be displayed for **approximately 5 seconds**. After it disappears, the code number is canceled.
6. If "Err" (error) appears on the display, repeat the procedure from Step 4.

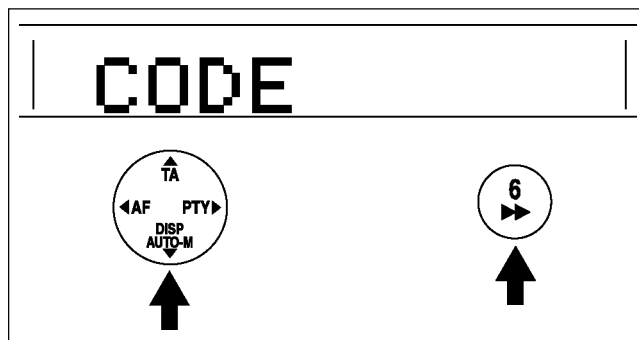

A6E8124W025


Canceling Anti-theft Operation

Properly input the selected code number to deactivate the anti-theft system and resume normal audio operation.

1. Turn the ignition switch to ACC position. ("CODE" will flash on the display.)
2. First press the AUTO-M button, then simultaneously press channel button 6 for **approximately 2 seconds** until bars appears on the display.

Note

- Perform Step 3 **within 10 seconds** after Step 2.

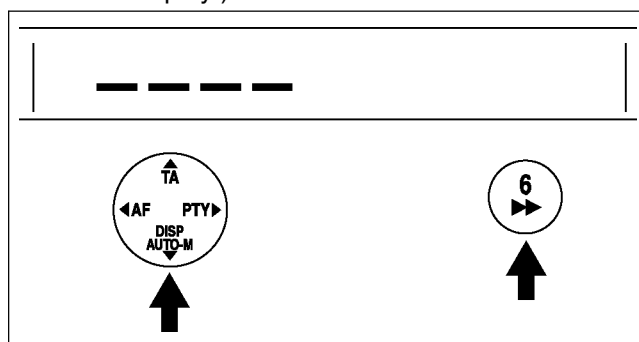


A6E8124W026

3. Use channel buttons 1–4 to input the selected code number. Press button 1 for the first digit, 2 for the second, 3 for the third, and 4 for the last digit. Input the number **within 10 seconds**. If the display is deleted, repeat the procedure from Step 1.


Caution

- **Three consecutive errors, including turning the ignition switch to LOCK position and disconnecting the audio unit, will activate the anti-theft system and render the audio unit completely inoperative.**

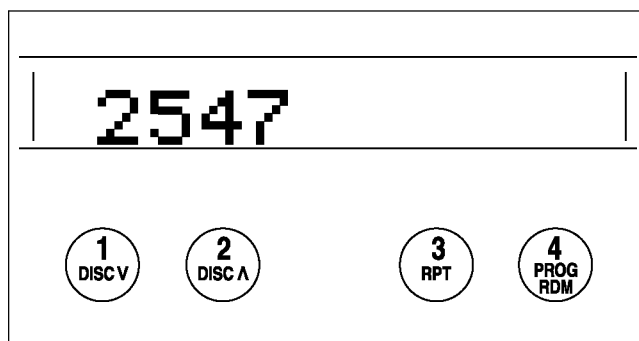

A6E8124W027

4. With the code number displayed, press the AUTO-M button, then simultaneously press channel button 6 for **approximately 2 seconds**. "CODE" will flash for **approximately 5 seconds**.
5. If "Err" (error) appears on the display, repeat the procedure from Step 1.

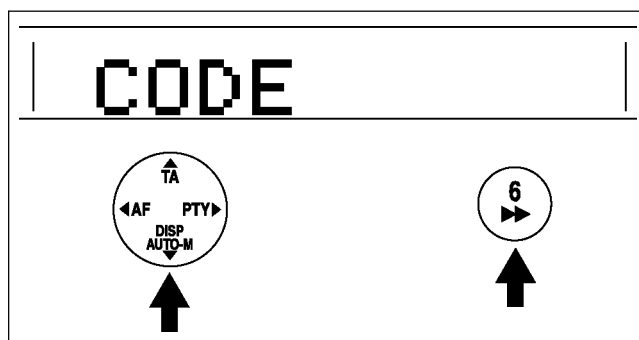

A6E8124W025

T